al tal ta CISCO



Your Phone



- 1 Incoming call or voicemail indicator
- 2 Volume
- ③ Feature and session buttons
- (4) Softkeys
- 5 Back, Navigation cluster, and Release
- 6 Hold, Transfer, and Conference
- Headset, Speakerphone, and Mute
- 8 Voicemail, Applications, and Directory

Feature and Session Buttons

Use feature buttons (left side) to view calls on a line or access features such as Speed Dial. Use session buttons (right side) to perform tasks such as resuming a held call. If you use a locale that reads right to left, the feature and session button locations are swapped.

Buttons illuminate to indicate status:

- Green, steady: Active call
- Green, flashing: Held call
- Amber, steady: Private line in use
- Amber, flashing: Incoming call
- Red, steady: Remote line in use
- Red, flashing: Remote line on hold

Make a Call

*Dial procedure remains the same

Enter a number and pick up the handset.

Answer a Call

Press the flashing amber line button.

Put a Call on Hold

- 1. Press Hold
- 2. To resume a held call, press Hold again.

View Your Recent Calls

- 1. Press Applications
- 2. Select Recents.
- 3. Select a line to view.

Transfer a Call to Another Person

1. From a call that is not on hold, press Transfer

Å.

- 2. Enter the other person's phone number.
- 3. Press Transfer again.

Add Another Person to a Call

- 1. From a connected call that is not on hold, press
 - Conference
- 2. Press Active calls to select a held call.
- 3. Press Conference again.

Make a Call with a Headset

- 1. Plug in a headset.
- 2. Enter a number using the keypad.
- 3. Press Headset

Make a Call with the Speakerphone

- 1. Enter a number using the keypad.
- 2. Press Speakerphone

Mute Your Audio

- 1. Press Mute
- 2. Press Mute again to turn mute off.

Listen to Your Voice Messages

Press **Messages** and follow the voice prompts. To check messages for a specific line, press the line button first.

Forward All Calls

- 1. Select a line and press Forward all.
- 2. Dial the number that you want to forward to, or press Voicemail.
- 3. To receive calls again, press Forward off.

Adjust the Volume in a Call

Press Volume eleft or right to adjust the handset, headset, or speakerphone volume when the phone is in use.

Adjust the Ringtone Volume

Press Volume - left or right to adjust the ringer volume when the phone is not in use.

Change the Ringtone

- 1. Press Applications
- 2. Select Settings > Ringtone.
- 3. Select a line.
- 4. Scroll through the list of ringtones and press **Play** to hear a sample.
- 5. Press Set and Apply to save a selection.

Adjust the Screen Brightness

- 1. Press Applications
- 2. Select Settings > Brightness.
- 3. Press the Navigation cluster left to decrease, or right to increase, the brightness.
- 4. Press Save.

Change the Font Size

- 1. Press Applications
- 2. Select Settings > Font Size.
- 3. Select a font size.
- 4. Press Save.

Pair a Mobile Device

- 1. Put your mobile device in discoverable mode.
- 2. On your IP Phone, press Applications
- 3. Select Bluetooth > Add Bluetooth.
- 4. Select your mobile device from the available devices list to pair.
- 5. Verify the passkey on your mobile device and your IP Phone.
- 6. When you are prompted to save mobile contacts, choose to make your mobile device contacts and call history available on your IP Phone.



www.wcupa.edu/RamPhone

Information Services & Technology

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)